

Telequip Coin Dispenser Canister Loading Device

1. Remove the clear plastic canister cover by depressing the two tabs at the bottom and sliding up. The canister handle should hang toward the back of the canister.
2. Set the canister stand (1) on a flat surface. Assemble the canister (2) to the stand by sliding it down onto the two rails.
3. Attach the canister loading device (3) to the canister by lowering the device onto the canister, engaging the top rear of the canister, then pivoting the bottom of the loading device inward to engage the front of the canister. Slide the device down until it engages the tabs at the base of the canister stand.
4. If the funnel retainer (4) is not already assembled onto the loading device, slide it onto the two rails at the top of the loading device. It will only assemble one way. When assembled properly, the funnel retainer will not slide off the loading device.
5. Assemble the funnel (5) to the funnel retainer by dropping the funnel onto the retainer with the slots aligned. Rotate the funnel 1/4 turn clockwise, positioned with the opening in the front and "nose" in the back.
6. To position the funnel over the corresponding denomination, lift the funnel slightly and slide the funnel and retainer until positioned over the appropriate column. Drop the funnel in place. The shoulder of the funnel should be flush with the retainer.
7. Begin loading coins for that denomination by slowly pouring coins into the funnel either by hand, cup or directly from the coin bag. Continue filling until that column is filled to the desired height indicated by the calibration strips on the canister.
8. Repeat this process for each denomination.
9. To remove the loading device, rotate the funnel turn counter-clockwise and pull upward to disengage from the funnel retainer. Slide the loading device upward to disengage from the bottom tabs of the canister stand. Swing the bottom device out and up to completely disengage.
10. Re-assemble the clear plastic cover to the canister. Using the handle, slide the canister upward to remove from the stand. The loading device is stored by sliding it into the storage rails on the back of the stand.

